


H 液压油箱
H OIL TANK

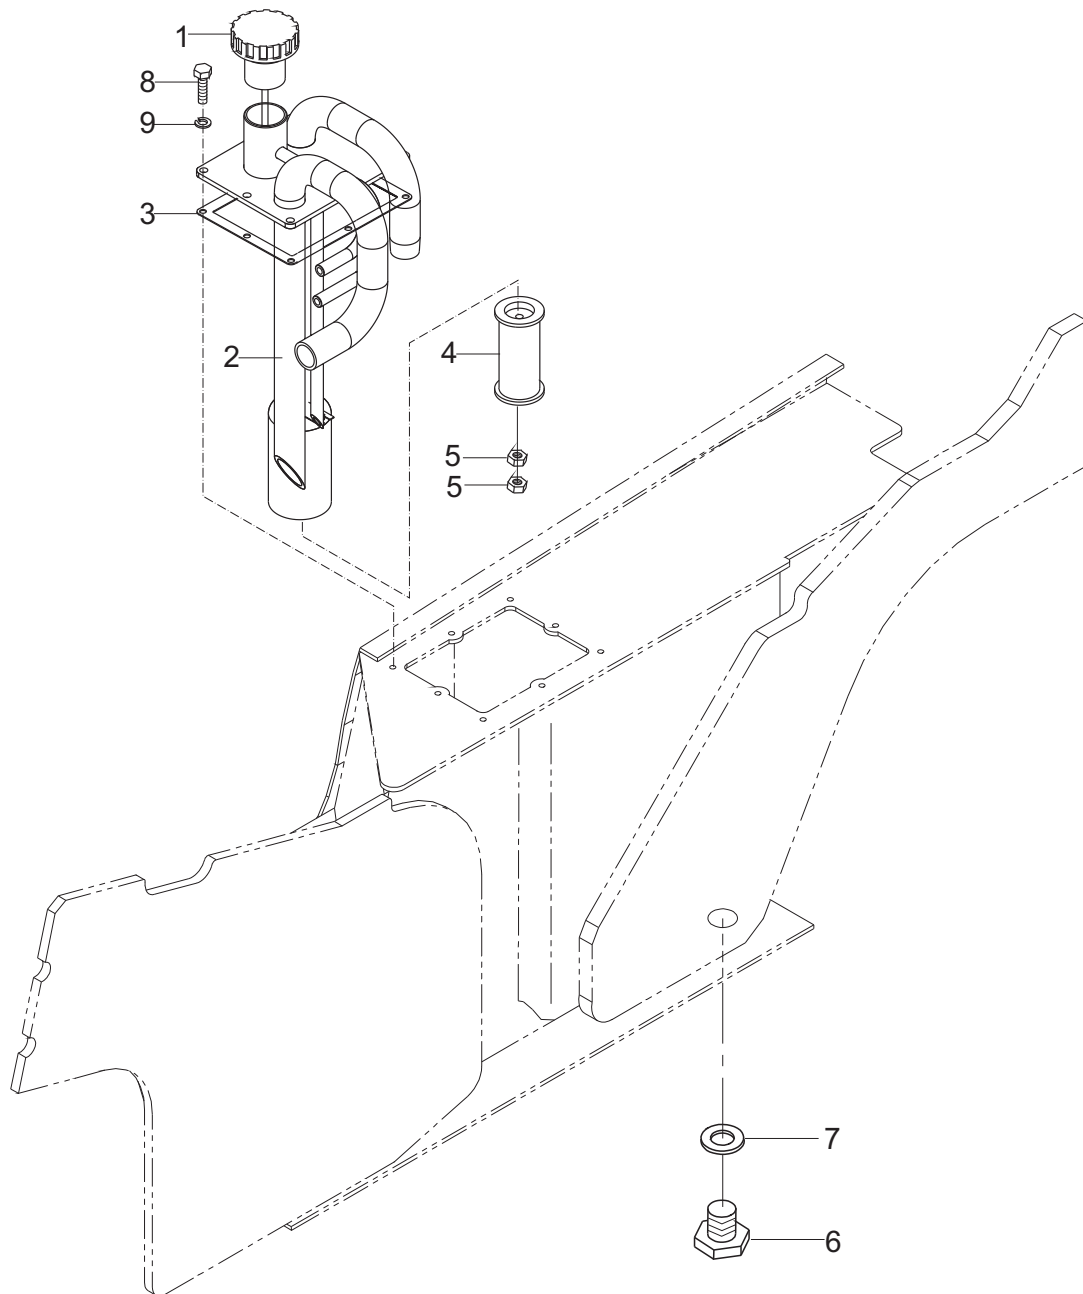

H 液压油箱
H OIL TANK

序号 Item No.	图号 PartNo.	版本 Edition	零部件名称	Description	件数 Q'ty	备注 Remark	适用时间 Applied time
A	AE937-50001	D01	液压油箱	Oil tank	1		
01	23657-50401	03	加油盖总成	Oil cap ass'y	1		
02	AE937-52001	08	油箱盖板总成	Cover ass'y	1		
03	52252-72071	07	盖板垫	Cover gasket	1		
04	23457-52221	01	滤油芯	Strainer	1		
05	B4116-00008	00	螺母M8	Nut	2	GB6170-86	
06	22197-52081	03	放油螺塞	Plug , drain	1		
07	Z6700-03027	00	组合垫圈30x2.7	Washer	1	JB982-77	
08	B0330-08020	00	螺栓M8X20	Bolt	8	GB5783-86	
09	B5050-00008	00	垫圈8	Washer lock	8	GB97. 1-85	-2013. 06
-	Z6701-00827	00	垫圈8(出口型)	Washer	8	JB982-77	2013. 07-